
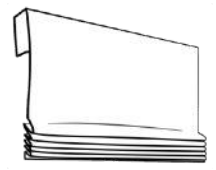
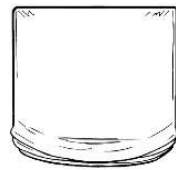


Working Measurements for Functional Shades

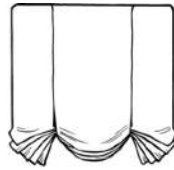



STEP 1: MEASURE YOUR WINDOW

FOR INSIDE MOUNT measure:

1. **Quantity:** the number of windows of the same size.
2. **Inside Width:** the horizontal size of the window inside the trim (molding).
3. **Inside Length:** the vertical distance inside the trim.


FOR OUTSIDE MOUNT measure:

1. **Quantity:** the number of windows of the same size.
2. **Window Width:** the horizontal size of the window including trim (molding).
3. **and 4. Left and right restrictions:** the horizontal space from outside the window trim to the nearest adjoining window, wall, cabinet or other obstruction.
5. **Top of Window to Apron:** the vertical distance from top of window trim to the apron.
6. **Top of Window to Ceiling:** the vertical space between the top of the window trim and the ceiling or crown molding.

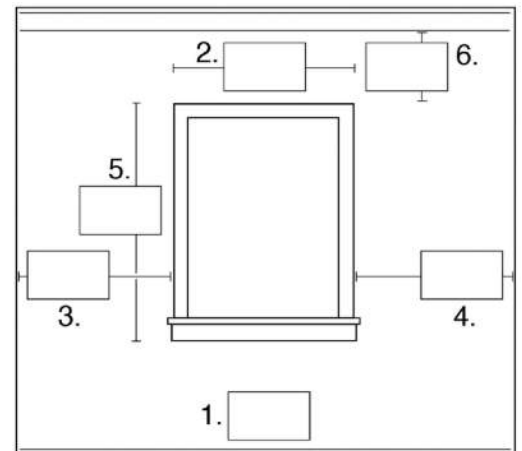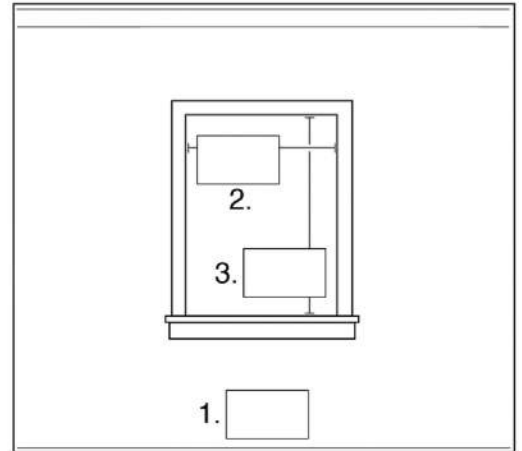

STEP 2: DETERMINE FINISHED MEASUREMENTS

- Indicate the **Quantity** of window treatments.
- For inside mounts, subtract 1/4" from the inside width for **Face Width**; add 1/2" to the inside length for the **Finished Length**.
- For outside mounts, add 1" to the window width for **Face Width**; add 6" to the window to apron measurement for **Finished Length**. Plan to mount so shade extends 4" above and 2" below window, if space allows.

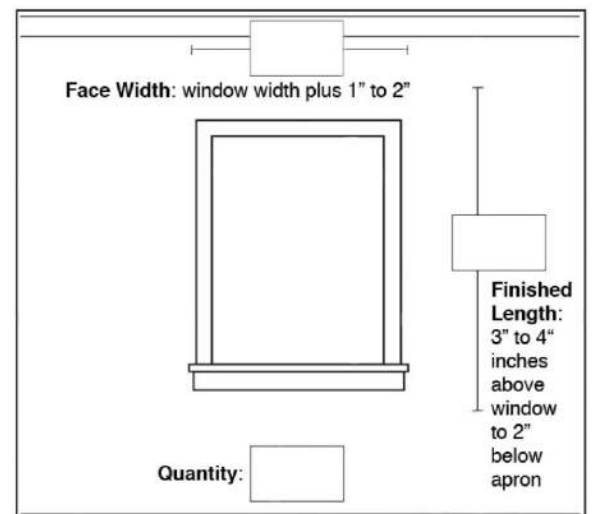

Finished measurements example above is for an **outside mount**.